

Disassembly/Reassembly	What	The Freerider	Where	Anwhere
	When	To clean, rotate the rim, or change tire	How	Read Below


Not recommended for the mechanically challenged. Keep track of loose screws and bearings.

Parts


1. Bearings
2. Retainer
3. Neck
4. Neck Pin
5. Frame - 2 sides
6. Platform/Inner Rim
7. Cross Bar
8. Tire/Outer Rim
9. Retainer Tool

What you will need:


- 2.5mm hex key included
- 5mm hex key included
- Phillips head screwdriver

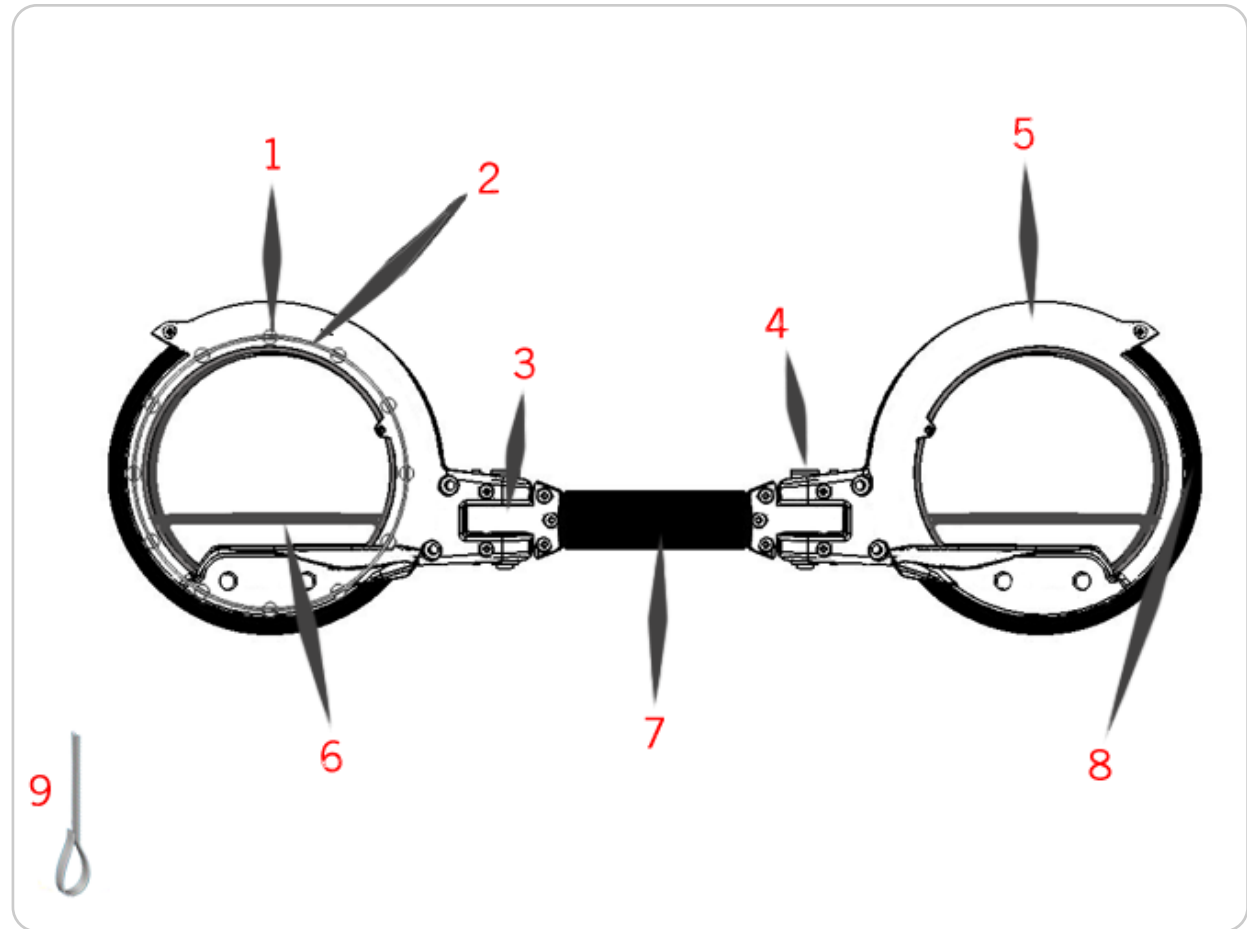


Disassembly/Reassembly	What	The Freerider	Where	Anwhere
	When	To clean, rotate the rim, or change tire	How	Read Below

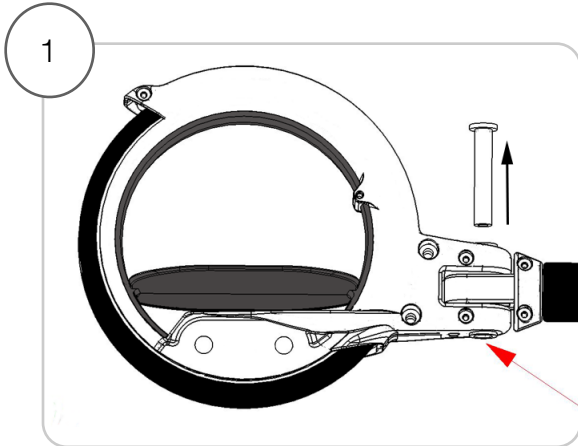


Disassembly: Unscrew from the bottom. Partially loosen Neck Pin screw. Push Neck Pin screw to release the pin. Continue removing screw and pin. Set aside Neck and Cross Bar. They do not need to be disassembled further.

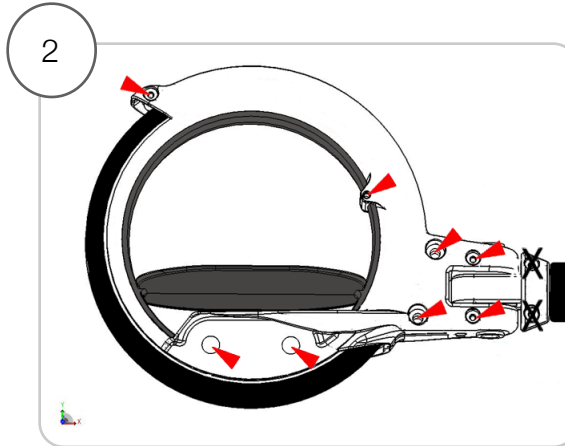

Disassembly: Remove all the screws (both sides) as indicated above. There are two hex key sizes, a 2.5mm and 5mm. There are 11 screws and 2 screw posts.

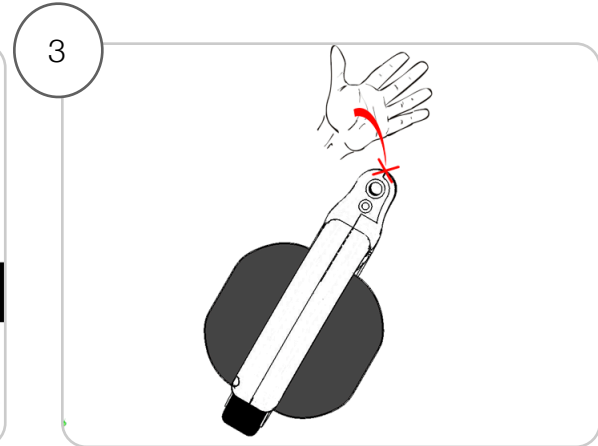


Disassembly: Before you pull the two halves apart, hit the end (as shown above) with your palm until you see a slight separation of the two halves.

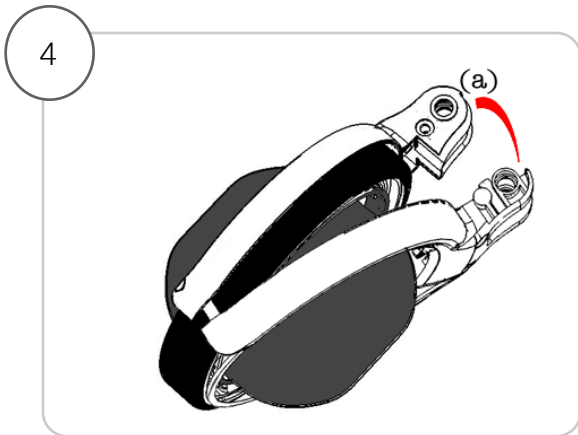


Disassembly: Pull apart halves from the front (a). Repeat step 3 to release remaining side.

***be careful of loose spacers falling out

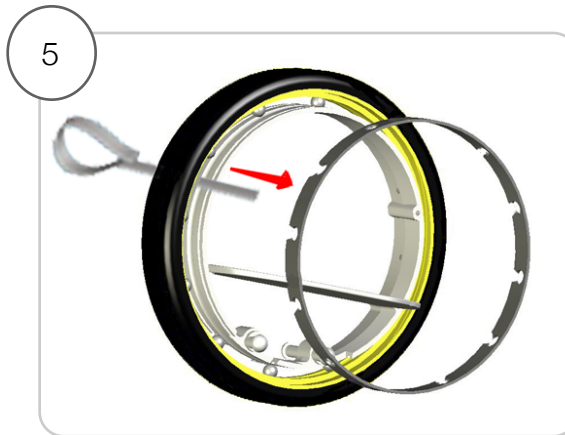


Disassembly: Use the retainer tool to push out the retainer. Press near a bearing from the side of the retainer with the opening.

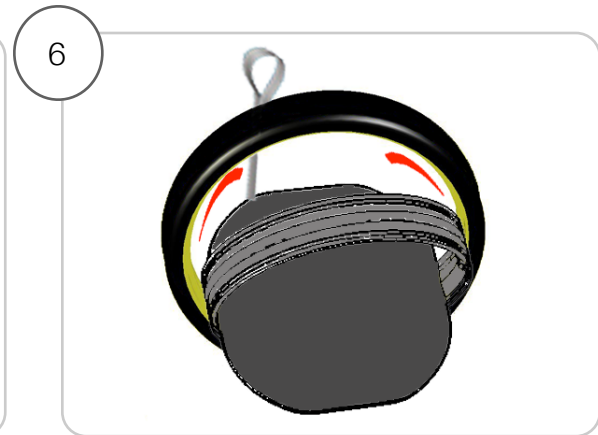


Disassembly: Use the retainer tool to slide bearings to the bottom (see fig.7) allowing the inner rim to be pulled out.

***be careful of loose bearings.


Disassembly/Reassembly	What	The Freerider	Where	Anwhere
	When	To clean, rotate the rim, or change tire	How	Read Below

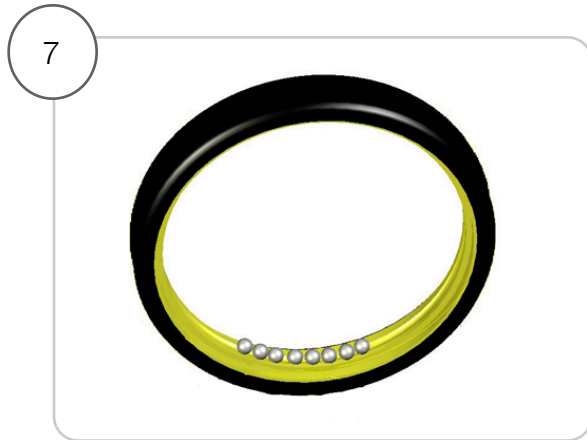


Reassembly: Make sure that a total of 8 bearings sit at the bottom of the outside rim. Bring inside rim over the bearings (fig.6) and hold in place as you turn over the wheel and allow the bearings to go around the rim.

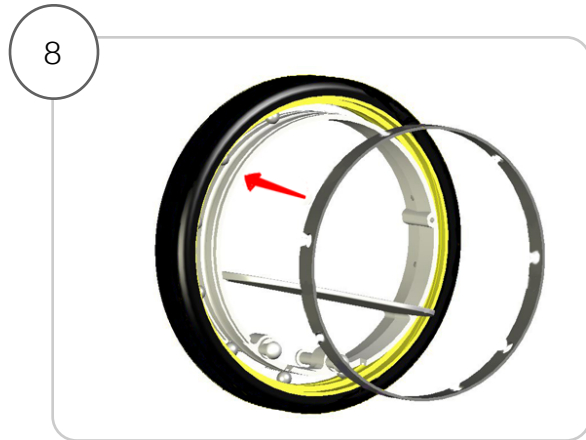


Reassembly: Place assembly flat. Use tool and arrange the bearings evenly and snap into bearings retainer, one by one, using the tool to position the bearings.

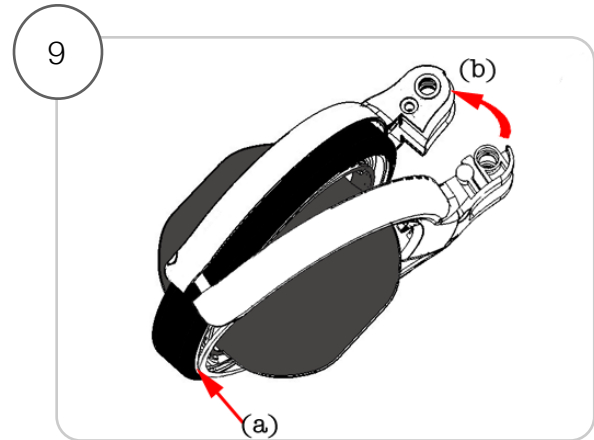


Reassembly: Place the back edge of the frame first (a), then snap together towards (b).

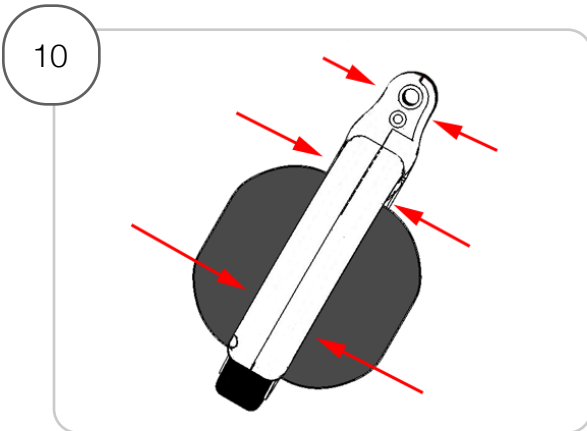

Reassembly: Press both sides of the frame to seal shut.

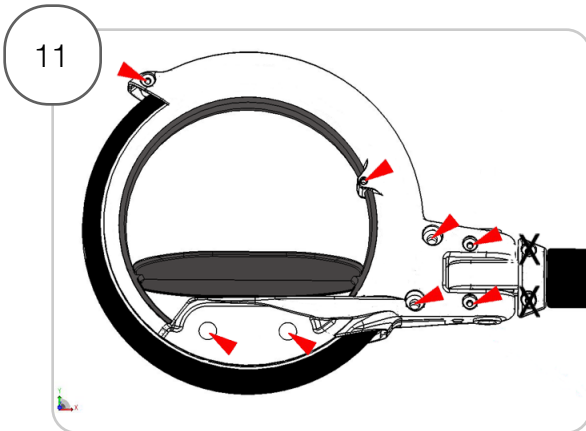

Reassembly: Replace screws

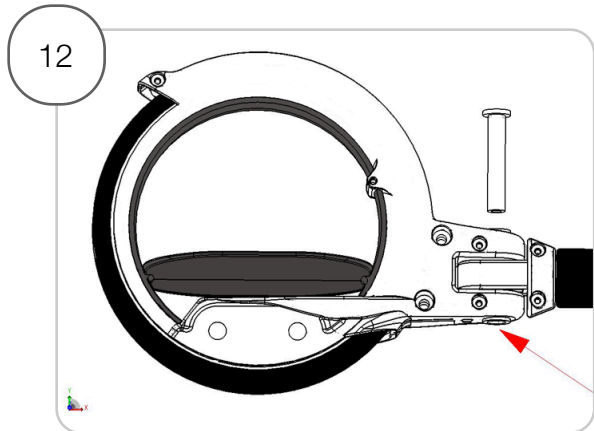

Reassembly: Replace Neck Pin and replace screw.